




Multi-band Backhaul/AP Dual Radio

RESTORE TO FACTORY DEFAULT SETTINGS

Required tools:

- Null Modem Cable with Full Handshaking:

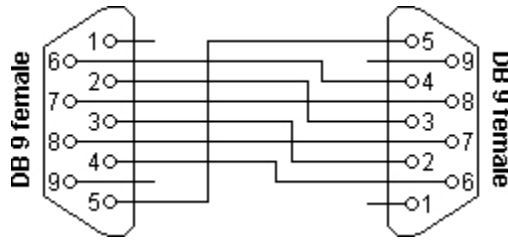

- A Terminal Emulator (e.g. Hyperterminal)

Parameters:

Bits per second: 115200

Data Bits: 8

Parity: None

Stop Bits: 1

Flow Control: None

Procedure:

- Use the Null Modem cable to connect your PC and the built-in Serial Port of the radio (Previously you have to open the outdoor enclosure)
- Open the Terminal Emulator and use the parameters mentioned above.
- Power Up the Radio (Use the same PoE system provided by Netkrom Technologies)
- As soon as the board starts booting, press CTRL-C to stop the boot process.
- Then execute the commands:

```
fis erase -f 0x50F40000 -l 0x00020000  
reset
```

- Then you will be able to ping 192.168.1.3 (MB-ROMB's default IP address) and use the default password which is admin.

